

# Lap Rack

## Model 3100A & 3100B

### Installation Instructions

Your lap rack has been packed upside down intentionally to protect the bearing assembly on the bottom. The bearing can withstand up to 1000 pounds of vertical force but may be damaged if rolled on it's edge. The lap rack should always be moved by two people to prevent damage.

**DO NOT REMOVE THE SPACERS UNTIL THE LAP RACK IS IN IT'S PERMANENT LOCATION.**

The floor where the lap rack is placed should be level and free from seams or bumps.



**PRACTICAL SYSTEMS, INC.**

11617 Prospect Road • Odessa, FL 33556  
(800) 237-8154 • Fax (800) 330-3800